

Preface

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 2.0A

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

AMD, Phenom, Athlon, Sempron and Duron are registered trademarks of AMD Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Preface

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

About the Manual

The manual consists of the following:

Chapter 1	Describes features of the motherboard.
Introducing the Motherboard	Go to ➞ page 1
Chapter 2	Describes installation of motherboard components.
Installing the Motherboard	Go to ➞ page 7
Chapter 3	Provides information on using the BIOS Setup Utility.
Using BIOS	Go to ➞ page 25
Chapter 4	Describes the motherboard software
Using the Motherboard Software	Go to ➞ page 47
Chapter 5	Describes the ATI Crossfire™ Technology
CrossFire® Technology (AMD Dual Graphics) Support	Go to ➞ page 51
Chapter 6	Provides information about SATA RAID Setup
Setting Up AMD A75 RAID Configuration	Go to ➞ page 55
Chapter 7	Provides basic troubleshooting tips
Trouble Shooting	Go to ➞ page 63

Preface

TABLE OF CONTENTS

Preface	i
Chapter 1	1
Introducing the Motherboard	1
Introduction.....	1
Feature.....	2
Motherboard Components.....	5
Chapter 2	7
Installing the Motherboard	7
Safety Precautions.....	7
Choosing a Computer Case.....	7
Installing the Motherboard in a Case.....	7
Checking Jumper Settings.....	8
Setting Jumpers.....	8
Checking Jumper Settings.....	9
Installing Hardware.....	10
Installing the Processor.....	10
Installing Memory Modules.....	11
Expansion Slots.....	13
Connecting Optional Devices.....	15
Installing a SATA Hard Drive.....	19
Connecting I/O Devices.....	20
Connecting Case Components.....	21
Front Panel Header.....	24
Chapter 3	25
Using BIOS	25
About the Setup Utility.....	25
The Standard Configuration.....	25
Entering the Setup Utilities.....	25
Resetting the Default CMOS Values.....	26
Using BIOS.....	26
BIOS Navigation Key.....	27
Main Menu.....	27
Advanced Menu.....	28
Chipset Menu.....	39
Frequency/Voltage Control Menu.....	41
Boot Menu.....	42
Security Menu.....	43

<i>Save & Exit Menu</i>	44
<i>Updating the BIOS</i>	46
Chapter 4	47
Using the Motherboard Software	47
About the Software DVD-ROM/CD-ROM.....	47
Auto-installing under Windows XP/Vista/7.....	47
<i>Running Setup</i>	48
Manual Installation.....	50
Utility Software Reference.....	50
Chapter 5	51
CrossFire® Technology [AMD Dual Graphics] Support	51
CrossFire® Technology.....	51
Chapter 6	55
Setting Up AMD A75 RAID Configuration	55
Setting Up a Bootable RAID Array.....	55
Chapter 7	63
Trouble Shooting	63
Start up problems during assembly.....	63
Start up problems after prolong use.....	64
Maintenance and care tips.....	64
Basic Troubleshooting Flowchart.....	65

Chapter 1

Introducing the Motherboard

Introduction

Thank you for choosing the **A75F-M2** motherboard. This motherboard is a high performance, enhanced function motherboard that supports socket for FM1 for AMD A series processor for high-end business or personal desktop markets.

The motherboard is based on AMD A75 (Hudson D3) express chipset for best desktop platform. A75 is a single-chip, highly integrated, high performance HyperTransport peripheral controller, unmatched by any other single chip-device controller. The memory controller supports DDR3 memory DIMM frequencies of 1866^{*1}/1600/1333. It supports two DDR3 slots with maximum memory size of 16 GB. One PCI Express x16 slots, intended for Graphics Interface, are fully compliant to the PCI Express Gen2 (version 2.0). In addition, two PCI Express x1 slots and one PCI slot are supported.

It integrates USB 2.0 and USB 3.0 interface, supporting up to ten USB 2.0 ports (six USB 2.0 ports and two USB 2.0 headers support additional four USB 2.0 ports) and four USB 3.0 ports (two USB 3.0 ports and one USB 3.0 header supports additional two USB 3.0 ports). The gray USB 2.0 header provides EZ charger technology, please refer to chapter 2 parts of [Front Panel USB 2.0 headers](#) to check the detail information. This motherboard integrates a Serial ATA host controller, supporting six SATA ports with maximum transfer rate up to 6 Gb/s each.

There is an advanced full set of I/O ports in the rear panel, including one PS/2 mouse and keyboard combo connector, one HDMI port (DVI port optional), one D-sub (VGA) port, six USB 2.0 ports, two USB 3.0 ports, one LAN port, three audio jacks for microphone, line-in and 6-ch line-out.



**1. Due to the limitation of chipset spec, it supports up to 1866 MHz for motherboard with a single DIMM per channel.*

Introducing the Motherboard

Feature

Processor

This motherboard uses a socket FM1 that carries the following features:

- Accommodates AMD A series processors
- Supports CPU up to 100W TDP

Chipset

The AMD A75 (Hudson D3) chipset is based on an innovative and scalable architecture with proven reliability and performance.

- Supports one PCI-Express x16 Gen2 slot
- Supports two PCI Express x1 slots
- Compliant with PCI 2.3 specification at 33 MHz
- Supports six Serial ATA devices which speeds up to 6 Gb/s
- Integrated USB 3.0 Host Controller supporting up to two USB 3.0 ports
- Integrated USB 2.0 Host Controller supporting up to ten USB 2.0 ports
- Supports integrated RAID 0,1 and RAID 10 functionality across all 6 ports (RAID 10 requires use of 4 or more SATA ports)
- Supports ACPI states S3, S4 and S5

Memory

- Supports DDR3 1866*/1600/1333 DDR3 SDRAM with Dual-channel architecture
- Accommodates two unbuffered DIMMs
- Up to 8 GB per DIMM with maximum memory size up to 16 GB



*1. Due to the limitation of chipset spec, it supports up to 1866 MHz for motherboard with a single DIMM per channel.

Audio

- 5.1 Channel High Definition Audio Codec
- DACs supports 44.1k/48k/96k sample rate
- Meets Microsoft WLP 3.10 Vista premium and mobile PCs audio requirements
- Direct Sound 3D™ compatible

Onboard LAN (Optional)

The onboard LAN provides the following features:

- | |
|---|
| <ul style="list-style-type: none"> • Supports PCI Express™ 1.1 • Integrated 10/100/1000 transceiver • Wake-on-LAN and remote wake-up support |
| <ul style="list-style-type: none"> • Supports PCI Express™ 1.1 • Integrated 10/100 transceiver • Wake-on-LAN and remote wake-up support |

Introducing the Motherboard

Expansion Options

The motherboard comes with the following expansion options:

- One PCI Express x16 slots for Graphics Interface
- Two PCI Express x1 slots
- One 32-bit PCI v2.3 compliant slot
- Six 7-pin SATA connectors

Integrated I/O

The motherboard has a full set of I/O ports and connectors:

- One PS/2 keyboard and mouse combo connector
- Six USB 2.0 ports
- One D-sub (VGA) port
- One HDMI port (DVI port optional)
- Two USB 3.0 blue ports
- One LAN port
- Audio jacks for microphone, line-in and 6-ch line-out

BIOS Firmware

The motherboard uses AMI BIOS that enables users to configure many system features including the following:

- Power management
- Wake-up alarms
- CPU parameters
- CPU and memory timing


The firmware can also be used to set parameters for different processor clock speeds.



1. Some hardware specifications and software items are subject to change without prior notice.
2. Due to chipset limitation, we recommend that motherboard be operated in the ambience between 0 and 50°C.


Introducing the Motherboard

Specifications

CPU	<ul style="list-style-type: none"> • FM1 for AMD A series processors • Supports CPU up to 100W TDP
Chipset	<ul style="list-style-type: none"> • AMD A75 (Hudson D3)
Memory	<ul style="list-style-type: none"> • Dual-channel DDR3 memory architecture • 2 x 240-pin DDR3 DIMM sockets support up to 16 GB • Supports DDR3 DDR3 1866^{*1}/1600/1333 SDRAM
	 <p><i>*1. Due to the limitation of chipset spec, it supports up to 1866 MHz for motherboard with a single DIMM per channel.</i></p>
Expansion Slots	<ul style="list-style-type: none"> • 1 x PCI Express Gen2 x16 slot • 2 x PCI Express x1 slots • 1 x PCI slot
Storage	<ul style="list-style-type: none"> • Supported by AMD A75 (Hudson D3) • 6 x Serial ATA 6.0 Gb/s Host Controllers
Audio	<ul style="list-style-type: none"> • Realtek ALC662 6-Ch High Definition audio CODEC • Compliant with HD audio specification
LAN	<ul style="list-style-type: none"> • Realtek 8111E VL Gigabit LAN • Realtek 8105E VL 10/100 LAN (optional)
Rear Panel I/O	<ul style="list-style-type: none"> • 1 x D-sub (VGA) port • 1 x HDMI port (DVI port optional) • 1 x PS/2 keyboard and mouse combo connector • 6 x USB 2.0 ports • 2 x USB 3.0 blue ports • 1 x RJ45 LAN port • 1 x Audio port (Line in, microphone in and line out)
Internal I/O Connectors & Headers	<ul style="list-style-type: none"> • 1 x 24-pin ATX Power Supply connector • 1 x 4-pin ATX Power Supply connector • 1 x 4-pin CPU_FAN connector • 1 x 3-pin SYS_FAN connector • 2 x USB 2.0 headers support additional 4 USB 2.0 ports • 1 x USB 3.0 header support additional 2 USB 3.0 ports • 6 x Serial ATA 6Gb/s connectors • 1 x COM header • 1 x LPT header • 1 x Front panel audio header • 1 x Case Open header • 1 x Speaker header • 1 x Clear CMOS header • 1 x SPDIF out header
System BIOS	<ul style="list-style-type: none"> • AMI BIOS with 16Mb SPI Flash ROM • Supports Multi-language BIOS Utility • Supports ECS M.I.B III Utility
AP support	<ul style="list-style-type: none"> • Supports eBLU/eDLU/eSF • Supports EZ Charger
Form Factor	<ul style="list-style-type: none"> • MATX Size, 244mm x 200mm

Introducing the Motherboard

Motherboard Components

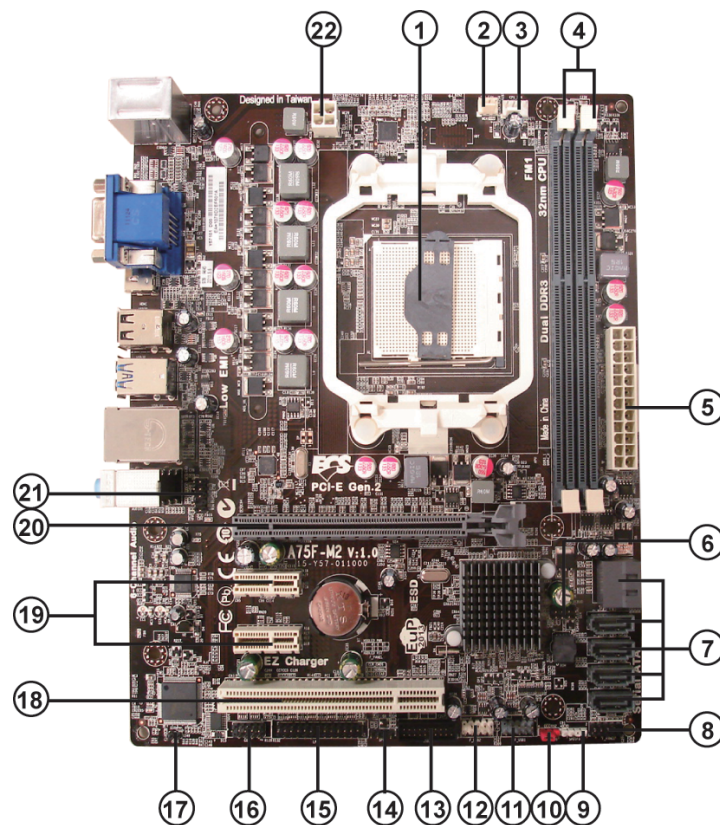

Introducing the Motherboard

Table of Motherboard Components

LABEL	COMPONENTS
1. CPU Socket	FM1 for AMD A series processors
2. SYS_FAN	System cooling fan connector
3. CPU_FAN	CPU cooling fan connector
4. DDR3_1~2	240-pin DDR3 SDRAM slots
5. ATX_POWER	Standard 24-pin ATX power connector
6. SPI_DEBUG	SPI debug header-for factory use only
7. SATA1~6	Serial ATA 6.0 Gb/s connectors
8. F_PANEL	Front panel switch/LED header
9. SPDIFO	SPDIF out header
10. CLR_CMOS	Clear CMOS jumper
11. F_USB1	Front panel USB 2.0 header (with EZ Charge function)
12. F_USB2	Front panel USB 2.0 header
13. USB3F	Front panel USB 3.0 header
14. SPK	Speaker header
15. LPT	Onboard parallel port header
16. COM	Onboard serial port header
17. CASE	Case open header
18. PCI	32-bit add-on card slot
19. PCIE1~2	PCI Express x1 slots
20. PCIEX16	PCI Express slot for graphics interface
21. F_AUDIO	Front panel audio header
22. ATX12V	4-pin +12V power connector

This concludes Chapter 1. The next chapter explains how to install the motherboard.

Introducing the Motherboard

Chapter 2

Installing the Motherboard

Safety Precautions

- Follow these safety precautions when installing the motherboard
- Wear a grounding strap attached to a grounded device to avoid damage from static electricity
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard
- Leave components in the static-proof bags they came in
- Hold all circuit boards by the edges. Do not bend circuit boards

Choosing a Computer Case

There are many types of computer cases on the market. The motherboard complies with the specifications for the Micro ATX system case. Some features on the motherboard are implemented by cabling connectors on the motherboard to indicators and switches on the system case. Make sure that your case supports all the features required. Make sure that your case has sufficient power and space for all drives that you intend to install.

Most cases have a choice of I/O templates in the rear panel. Make sure that the I/O template in the case matches the I/O ports installed on the rear edge of the motherboard.


This motherboard carries an MATX form factor of 244 X 200 mm. Choose a case that accommodates this form factor.

Installing the Motherboard in a Case

Refer to the following illustration and instructions for installing the motherboard in a case.

Most system cases have mounting brackets installed in the case, which correspond the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

Ensure that your case has an I/O template that supports the I/O ports and expansion slots on your motherboard.

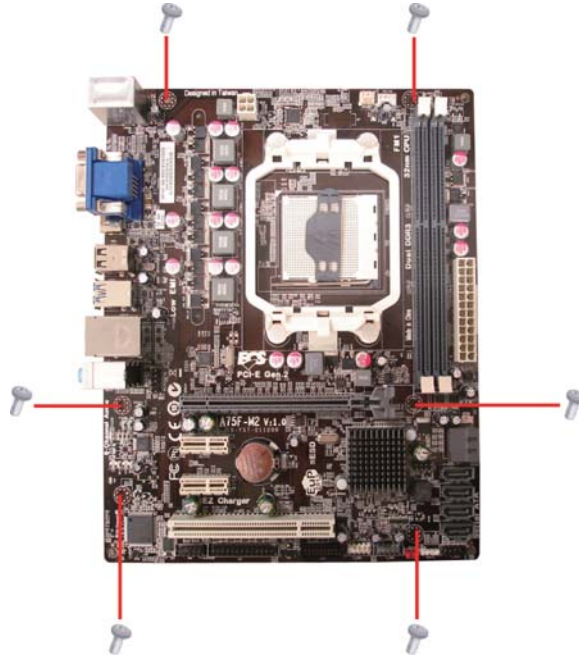

Do not over-tighten the screws as this can stress the motherboard.

Checking Jumper Settings

This section explains how to set jumpers for correct configuration of the motherboard.

Setting Jumpers

Use the motherboard jumpers to set system configuration options. Jumpers with more than one pin are numbered. When setting the jumpers, ensure that the jumper caps are placed on the correct pins.

The illustrations show a 2-pin jumper. When the jumper cap is placed on both pins, the jumper is **SHORT**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **OPEN**.




SHORT



OPEN

This illustration shows a 3-pin jumper. Pins 1 and 2 are **SHORT**.

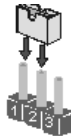


Installing the Motherboard

Checking Jumper Settings

The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.



Name	Type	Description	Setting (default)	
CLR_CMOS	3-pin	Clear CMOS	1-2: NORMAL 2-3: CLEAR Before clearing the CMOS, make sure to turn off the system.	1  CLR_CMOS



To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to “Load Default Settings” and then “Save Changes and Exit”.

Installing the Motherboard

Installing Hardware

Installing the Processor



Caution: When installing a CPU heatsink and cooling fan make sure that you DO NOT scratch the motherboard or any of the surface-mount resistors with the clip of the cooling fan. If the clip of the cooling fan scrapes across the motherboard, you may cause serious damage to the motherboard or its components.

On most motherboards, there are small surface-mount resistors near the processor socket, which may be damaged if the cooling fan is carelessly installed.

Avoid using cooling fans with sharp edges on the fan casing and the clips. Also, install the cooling fan in a well-lit work area so that you can clearly see the motherboard and processor socket.

Before installing the Processor

This motherboard automatically determines the CPU clock frequency and system bus frequency for the processor. You may be able to change these settings by making changes to jumpers on the motherboard, or changing the settings in the system Setup Utility. We strongly recommend that you do not over-clock processors or other components to run faster than their rated speed.



Warning:

1. Over-clocking components can adversely affect the reliability of the system and introduce errors into your system. Over-clocking can permanently damage the motherboard by generating excess heat in components that are run beyond the rated limits.

2. Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.

This motherboard has a socket FM1 processor socket. When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

Installing the Motherboard

CPU Installation Procedure

The following illustration shows CPU installation components.

- 1 Install your CPU. Pull up the lever away from the socket and lift up to 90-degree angle.
- 2 Locate the CPU cut edge (the corner with the pin hold noticeably missing). Align and insert the CPU correctly.
- 3 Press the lever down and apply thermal grease on top of the CPU.
- 4 Put the CPU Fan down on the retention module and snap the four retention legs of the cooling fan into place.
- 5 Flip the levers over to lock the heat sink in place and connect the CPU cooling Fan power cable to the CPUFAN connector. This completes the installation.



To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 4800 rpm at least. CPU fan and heatsink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.

Installing Memory Modules

This motherboard accommodates two memory modules. It can support two 240-pin DDR3 1866*/1600/1333. The total memory capacity is 16 GB.

DDR3 SDRAM memory module table

Memory module	Memory Bus
DDR3 1333	667 MHz
DDR3 1600	800 MHz
DDR3 1866	933 MHz

You must install at least one module in any of the two slots. Each module can be installed with 8 GB of memory.



Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.




**1. Due to the limitation of chipset spec, it supports up to 1866 MHz for motherboard with a single DIMM per channel.*

Installing the Motherboard

Installation Procedure

Refer to the following to install the memory modules.

- 1 This motherboard supports unbuffered DDR3 SDRAM only.
- 2 Push the latches on each side of the DIMM slot down.
- 3 Align the memory module with the slot. The DIMM slots are keyed with notches and the DIMMs are keyed with cutouts so that they can only be installed correctly.
- 4 Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.
- 5 Install the DIMM module into the slot and press it firmly down until it seats correctly. The slot latches are levered upwards and latch on to the edges of the DIMM.
- 6 Install any remaining DIMM modules.

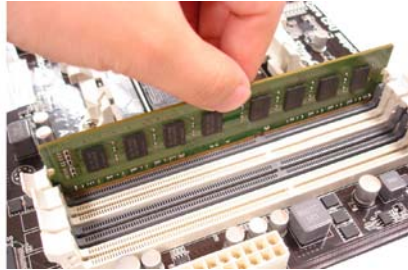


** For reference only*

Installing the Motherboard

Expansion Slots

Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard's features and capabilities. With these efficient facilities, you can increase the motherboard's capabilities by adding hardware that performs tasks that are not part of the basic system.

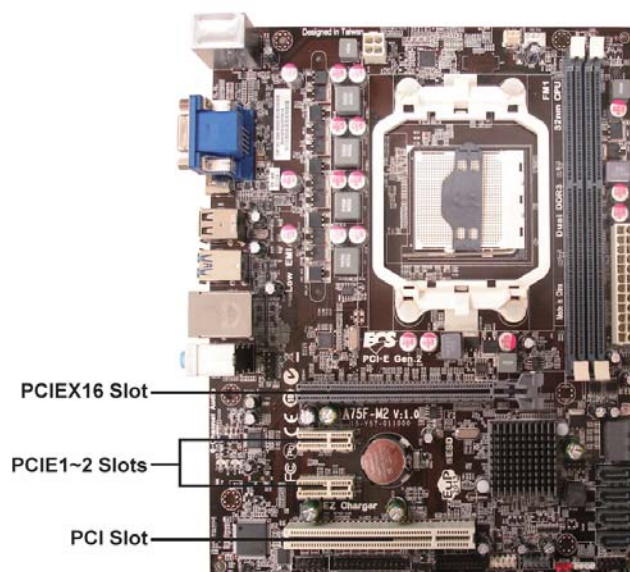

PCIEX16 Slot

The PCI Express x16 slot is used to install an external PCI Express graphics card that is fully compliant to the PCI Express Gen2 (version 2.0).

PCIEX1~2 Slots

The PCI Express x1 slots are fully compliant to the PCI Express Gen2 (version 2.0).

PCI Slot

This motherboard is equipped with one standard PCI slot. PCI stands for Peripheral Component Interconnect and is a bus standard for expansion cards, which for the most part, is a supplement of the older ISA bus standard. The PCI slot on this board is PCI v2.3 compliant.



Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.

Installing the Motherboard

Follow these instructions to install an add-on card:

- 1 Remove a blanking plate from the system case corresponding to the slot you are going to use.
- 2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.
- 3 Secure the metal bracket of the card to the system case with a screw.




** For reference only*

Installing the Motherboard

Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

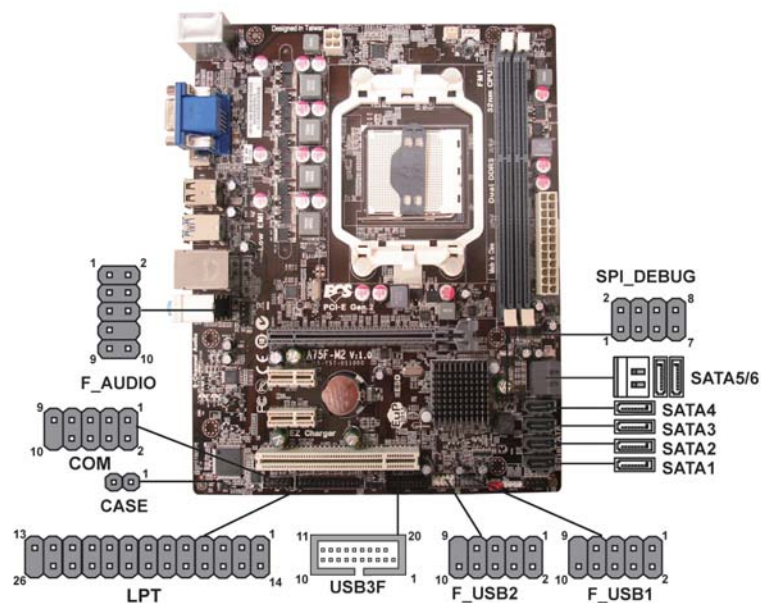

SATA1~6: Serial ATA connectors

These connectors are used to support the new Serial ATAIII devices for the highest data transfer rates (6.0 Gb/s), simpler disk drive cabling and easier PC assembly. It doubles the transfer rate of current SATA 3.0Gb/s interface.

Pin	Signal Name	Pin	Signal Name
1	Ground	2	TX+
3	TX-	4	Ground
5	RX-	6	RX+
7	Ground	-	-

Installing the Motherboard

F_USB1~2: Front Panel USB 2.0 headers



The motherboard has six USB 2.0 ports installed on the rear edge I/O port array. Additionally, some computer cases have USB 2.0 ports at the front of the case. If you have this kind of case, use auxiliary USB 2.0 connector to connect the front-mounted ports to the motherboard.

Unlike F_USB2 in this mainboard, F_USB1 supports EZ Charger technology, provides 3 times current than general USB port in off mode for USB devices. It is useful and excellent, especially for the iPhone, iPad and iPod touch devices that need a large amount of current for faster recharging within less time.

Pin	Signal Name	Function
1	USBPWR	Front Panel USB Power
2	USBPWR	Front Panel USB Power
3	USB_FP_P0-	USB Port 0 Negative Signal
4	USB_FP_P1-	USB Port 1 Negative Signal
5	USB_FP_P0+	USB Port 0 Positive Signal
6	USB_FP_P1+	USB Port 1 Positive Signal
7	GND	Ground
8	GND	Ground
9	Key	No pin
10	USB_FP_OC0	Overcurrent signal



Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.

F_AUDIO: Front Panel Audio header

This header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access.

Pin	Signal Name	Pin	Signal Name
1	PORT 1L	2	AUD_GND
3	PORT 1R	4	PRESENCE#
5	PORT 2R	6	SENSE1_RETURN
7	SENSE_SEND	8	KEY
9	PORT 2L	10	SENSE2_RETURN

CASE: Chassis Intrusion Detect Header

This detects if the chassis cover has been removed. This function needs a chassis equipped with intrusion detection switch and needs to be enabled in BIOS.

Pin 1-2	Function
Short	Chassis cover is removed
Open	Chassis cover is closed

Installing the Motherboard

USB3F: Front Panel USB 3.0 header

This Motherboard implements one USB 3.0 header supporting 2 extra front USB 3.0 ports, which delivers 5Gb/s transfer rate.

Pin	Signal Name	Function
1	Vbus	Front Panel USB Power
2	IntA_P1_SSRX-	USB3 ICC Port1 SuperSpeed Rx-
3	IntA_P2_SSRX+	USB3 ICC Port1 SuperSpeed Rx+
4	GND	GND
5	IntA_P1_SSTX-	USB3 ICC Port1 SuperSpeed Tx-
6	IntA_P1_SSTX+	USB3 ICC Port1 SuperSpeed Tx+
7	GND	GND
8	IntA_P1_D-	USB3 ICC Port1 D-
9	IntA_P1_D+	USB3 ICC Port1 D+
10	ID USBOC-	Over Current Protection
11	IntA_P2_D+	USB3 ICC Port2 D+
12	IntA_P2_D-	USB3 ICC Port2 D-
13	GND	GND
14	IntA_P2_SSTX+	USB3 ICC Port2 SuperSpeed Tx+
15	IntA_P2_SSTX-	USB3 ICC Port2 SuperSpeed Tx-
16	GND	GND
17	IntA_P2_SSRX+	USB3 ICC Port2 SuperSpeed Rx+
18	IntA_P2_SSRX-	USB3 ICC Port2 SuperSpeed Rx-
19	Vbus	Front Panel USB Power



Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.

COM: Onboard serial port header

Connect a serial port extension bracket to this header to add a serial port to your system.

Pin	Signal Name	Function
1	DCDB	Data Carrier Detect
2	SINB	Serial Input
3	SOUTB	UART B Serial Output
4	DTRB	UART B Data Terminal Ready
5	GND	Ground
6	DSRB	Data Set Ready
7	RTSB	RART B Request to Send
8	CTSB	Clear to Send
9	RI	Ring Indicator
10	Key	No pin

Installing the Motherboard

LPT: Onboard parallel port Header

This is a header that can be used to connect to the printer, scanner or other devices.

Pin	Signal Name	Pin	Signal Name
1	STROBE	14	AFD
2	PD0	15	ERROR
3	PD1	16	INIT
4	PD2	17	SLCT
5	PD3	18	Ground
6	PD4	19	Ground
7	PD5	20	Ground
8	PD6	21	Ground
9	PD7	22	Ground
10	ACK	23	Ground
11	BUSK	24	Ground
12	PE	25	Ground
13	SLCT	26	Key

Installing the Motherboard

Installing a SATA Hard Drive

This section describes how to install a SATA hard drive.

About SATA Connectors

Your motherboard features six SATA connectors supporting a total of six drives. SATA refers to Serial ATA (Advanced Technology Attachment) is the standard interface for the IDE hard drives which are currently used in most PCs. These connectors are well designed and will only fit in one orientation. Locate the SATA connectors on the motherboard and follow the illustration below to install the SATA hard drives.

Installing Serial ATA Hard Drives

To install the Serial ATA (SATA) hard drives, use the SATA cable that supports the Serial ATA protocol. This SATA cable comes with an SATA power cable. You can connect either end of the SATA cable to the SATA hard drive or the connector on the motherboard.



SATA cable (optional)



SATA power cable (optional)

Refer to the illustration below for proper installation:

- 1 Attach either cable end to the connector on the motherboard.
- 2 Attach the other cable end to the SATA hard drive.
- 3 Attach the SATA power cable to the SATA hard drive and connect the other end to the power supply.



* For reference only




This motherboard supports the “Hot-Plug” function.

Installing the Motherboard

Connecting I/O Devices

The backplane of the motherboard has the following I/O ports:

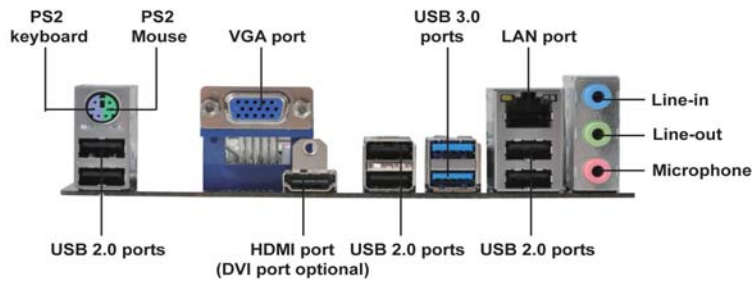

PS/2 mouse and keyboard combo connector

Connect the PS/2 Keyboard or PS/2 Mouse to the PS/2 combo port.

USB 2.0 Ports

Use the USB 2.0 ports to connect USB 2.0 devices.

USB 3.0 Ports

Use the USB 3.0 ports to connect USB3.0 devices.

LAN Port

Connect an RJ-45 jack to the LAN port to connect your computer to the network.

HDMI Port (DVI port optional)

Connect the HDMI port to the HDMI devices.

VGA Port

Connect your monitor to the VGA port.

Audio Ports


Use the audio jacks to connect audio devices. The first jack is for stereo line-in signal. The second jack is for stereo line-out signal. The third jack is for microphone.

Installing the Motherboard

Connecting Case Components


After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

- 1 Connect the CPU cooling fan cable to **CPU_FAN**.
- 2 Connect the standard power supply connector to **ATX_POWER**.
- 3 Connect the case switches and indicator LEDs to the **F_PANEL**.
- 4 Connect the system cooling fan connector to **SYS_FAN**.
- 5 Connect the auxiliary case power supply connector to **ATX12V**.
- 6 Connect the case speaker cable to **SPK**.

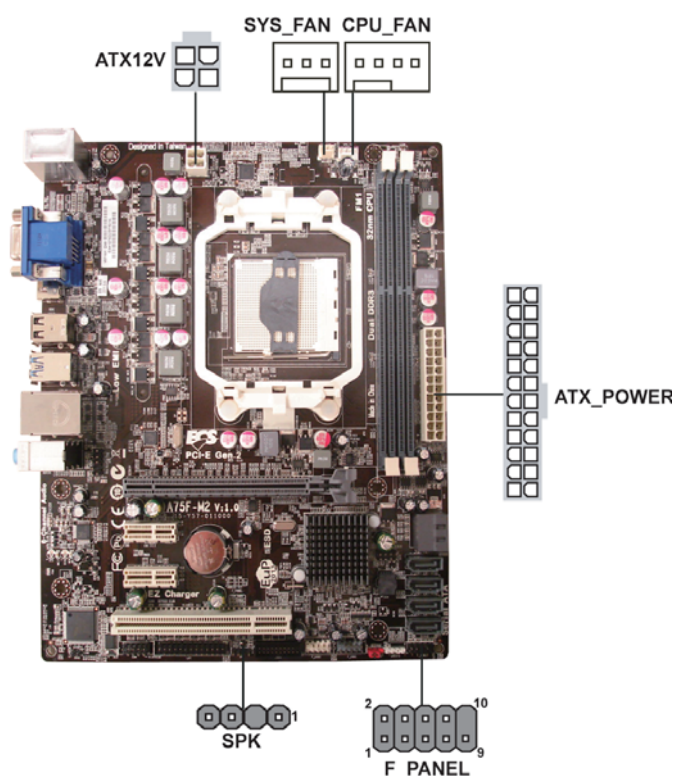

Connecting 24-pin power cable

The ATX 24-pin connector allows you to connect to ATX v2.x power supply.

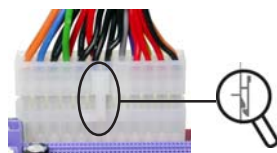

24-pin power cable


With ATX v2.x power supply, users please note that when installing 24-pin power cable, the latches of power cable and the ATX match perfectly.

Installing the Motherboard



Connecting 4-pin power cable

The ATX12V4P power connector is used to provide power to the CPU.

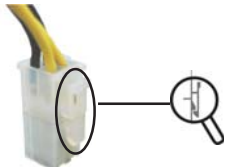

4-pin power cable

When installing 4-pin power cable, the latches of power cable and the ATX12V4P match perfectly.

CPU_FAN: Cooling FAN Power Connector

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor
4	PWM	CPU FAN control



Users please note that the fan connector supports the CPU cooling fan of 1.1A~2.2A (26.4W max.) at +12V.

ATX_POWER: ATX 24-pin Power Connector

Pin	Signal Name	Pin	Signal Name
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Ground	15	COM
4	+5V	16	PS_ON
5	Ground	17	COM
6	+5V	18	COM
7	Ground	19	COM
8	PWRGD	20	-5V
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	COM

SYS_FAN: FAN Power Connector

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor

Installing the Motherboard

ATX12V: ATX 12V Power Connector

Pin	Signal Name
1	Ground
2	Ground
3	+12V
4	+12V


SPK: Internal speaker

Pin	Signal Name
1	VCC
2	Key
3	GND
4	Signal

Installing the Motherboard

Front Panel Header

The front panel header (F_PANEL) provides a standard set of switch and LED headers commonly found on ATX or Micro ATX cases. Refer to the table below for information:

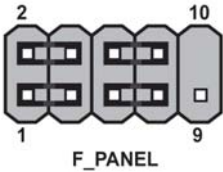

Pin	Signal	Function	Pin	Signal	Function
1	HD_LED_P	Hard disk LED (+)	2	FP PWR/SLP	*MSG LED (+)
3	HD_LED_N	Hard disk LED (-)	4	FP PWR/SLP	*MSG LED (-)
5	RST_SW_N	Reset Switch (-)	6	PWR_SW_P	Power Switch (+)
7	RST_SW_P	Reset Switch (+)	8	PWR_SW_N	Power Switch (-)
9	RSVD	Reserved	10	Key	No pin

* MSG LED (dual color or single color)

Hard Drive Activity LED

Connecting pins 1 and 3 to a front panel mounted LED provides visual indication that data is being read from or written to the hard drive. For the LED to function properly, an IDE drive should be connected to the onboard IDE interface. The LED will also show activity for devices connected to the SCSI (hard drive activity LED) connector.

Power/Sleep/Message waiting LED

Connecting pins 2 and 4 to a single or dual-color, front panel mounted LED provides power on/off, sleep, and message waiting indication.

Reset Switch

Supporting the reset function requires connecting pin 5 and 7 to a momentary-contact switch that is normally open. When the switch is closed, the board resets and runs POST.

Power Switch

Supporting the power on/off function requires connecting pins 6 and 8 to a momentary-contact switch that is normally open. The switch should maintain contact for at least 50 ms to signal the power supply to switch on or off. The time requirement is due to internal de-bounce circuitry. After receiving a power on/off signal, at least two seconds elapses before the power supply recognizes another on/off signal.

This concludes Chapter 2. The next chapter covers the BIOS.

Installing the Motherboard

Chapter 3

Using BIOS

About the Setup Utility

The computer uses the latest “American Megatrends Inc. ” BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system’s configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup


Entering the Setup Utility

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

Press DEL to enter SETUP

Using BIOS

Press the delete key to access BIOS Setup Utility.

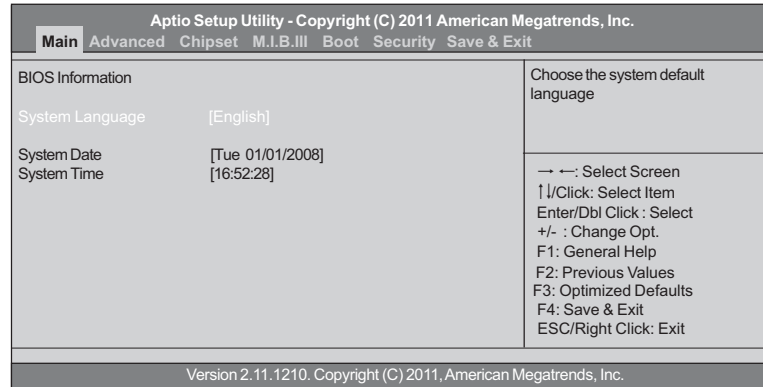

Resetting the Default CMOS Values

When powering on for the first time, the POST screen may show a “CMOS Settings Wrong” message. This standard message will appear following a clear CMOS data at factory by the manufacturer. You simply need to Load Default Settings to reset the default CMOS values.

Note: Changes to system hardware such as different CPU, memories, etc. may also trigger this message.



Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a triangle ►) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

Using BIOS

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a triangle ►.



The default BIOS setting for this motherboard apply for most conditions with optimum performance. We do not suggest users change the default values in the BIOS setup and take no responsibility to any damage caused by changing the BIOS settings.

BIOS Navigation Keys

The BIOS navigation keys are listed below:

KEY	FUNCTION
ESC	Exits the current menu
↑↓→←	Scrolls through the items on a menu
+/-	Modifies the selected field's values
Enter	Select
F1	General Help
F2	Previous Value
F3	Optimized Defaults
F4	Save & Exit



For the purpose of better product maintenance, the manufacture reserves the right to change the BIOS items presented in this manual. The BIOS setup screens shown in this chapter are for reference only and may differ from the actual BIOS. Please visit the manufacture's website for updated manual.

Main Menu

When you enter the BIOS Setup program, the main menu appears, giving you an overview of the basic system information. Select an item and press <Enter> to display the submenu.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.III Boot Security Save & Exit
BIOS Information		Choose the system default language
System Language	[English]	
System Date	[Tue 01/01/2008]	
System Time	[16:52:28]	
		→ ←: Select Screen ↑ ↓/Click: Select Item Enter/DbI Click : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Using BIOS

System Language (English)


This item is used to set system language.

Date & Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.

Advanced Menu

The Advanced menu items allow you to change the settings for the CPU and other system.

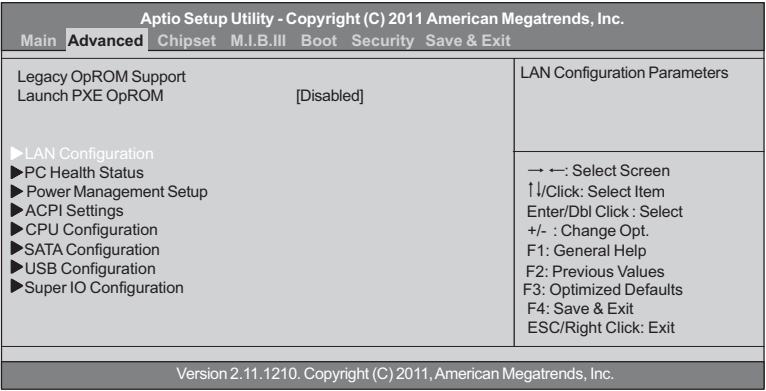

Launch PXE OpROM (Disabled)

The item enables or disables launch PXE Option ROM.

LAN Configuration

The item in the menu shows the LAN-related information that the BIOS automatically detects.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.III Boot Security Save & Exit
LAN Configuration		Enabled or Disabled Onboard LAN
Onboard LAN Controller [Enabled]		
		→ ←: Select Screen ↑/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Onboard LAN Controller (Enabled)

Use this item to enable or disable the Onboard LAN.

Press <Esc> to return to the Advanced Menu page.

PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.III Boot Security Save & Exit
▶ Smart Fan Function		
CPU Tct1	:	+38
CPU FAN	:	N/A
SYS FAN	:	4672 RPM
CPU Vcore	:	+1.200 V
DIMM Voltage	:	+1.544 V
SB Voltage	:	+1.088 V
		→ ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

▶ Smart Fan Function

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.III Boot Security Save & Exit
CPU Smart Fan Control [Enabled]		
Smart Fan Mode		[Normal]
High Limit Temperature		60
Low Limit Temperature		37
High Limit PWM		200
Low Limit PWM		56
		→ ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

CPU Smart Fan Control (Enabled)

This item enables you to define the CPU temperature by smartly adjusting the CPU Fan. When it is set at certain temperature, the CPU Fan PWM value will change accordingly.

Smart Fan Mode (Normal)

This item allows you to select the fan mode (Normal, Quiet, Silent, or Manual) for a better operation environment. If you choose Normal mode, the fan speed will be auto adjusted depending on the CPU temperature. If you choose Quiet mode, the fan speed will be auto minimized for quiet environment. If you choose Silent mode, the fan speed will be auto restricted to make system more quietly. If you choose Manual mode, the fan speed will be adjust depending on users' parameters.

Using BIOS

Press <Esc> to return to the PC Health Status page.

System Component Characteristics

These items display the monitoring of the overall inboard hardware health events, such as System & CPU temperature, CPU & DIMM voltage, CPU & system fan speed,... etc.

- CPU Tct1
- CPU FAN
- SYS FAN
- CPU Vcore
- DIMM Voltage
- SB Voltage

Press <Esc> to return to the Advanced Menu page.

Power Management Setup

This page sets up some parameters for system power management operation.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.III Boot Security Save & Exit
Power Management Setup		About Resume by RING
Resume By RING	[Disabled]	→ ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbl Click : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Resume By PME	[Disabled]	
Resume By USB 1.x/2.0 (S3)	[Disabled]	
Resume By PS2 KB (S3)	[Disabled]	
Resume By PS2 MS (S3)	[Disabled]	
EUP Function	[Enabled]	
Power LED Type	[Dual Color LED]	
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Resume By RING (Disabled)

An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.

Resume By PME (Disabled)

This item specifies whether the system will be awakened from power saving modes when activity or input signal of the specified hardware peripheral or component is detected.

Resume By USB 1.x/2.0 (S3) (Disabled)

This item allows you to enable/disable the USB 1.x/2.0 device wakeup function from S3 mode.

Resume By PS2 KB (S3) (Disabled)

This item enables or disables you to allow keyboard activity to awaken the system from power saving mode.

Resume By PS2 MS (S3) (Disabled)

This item enables or disables you to allow mouse activity to awaken the system from power saving mode.

EUP Support (Enabled)

This item allows user to enable or disable EUP support.

Power LED Type (Dual Color LED)


This item shows the type of the Power LED.

Press <Esc> to return to the Advanced Menu page.

Using BIOS

ACPI Configuration

The item in the menu shows the highest ACPI sleep state when the system enters suspend.

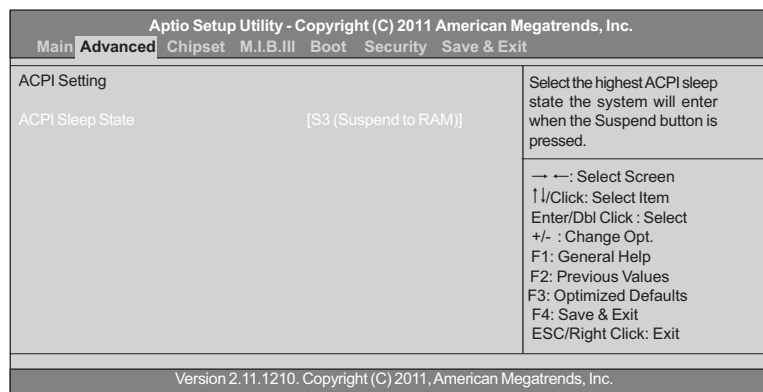


ACPI Sleep State (S3(Suspend to RAM))

This item allows user to enter the ACPI S3 (Suspend toRAM) Sleep State(default).

Press <Esc> to return to the Advanced Menu page.

CPU Configuration

The item in the menu shows the CPU.

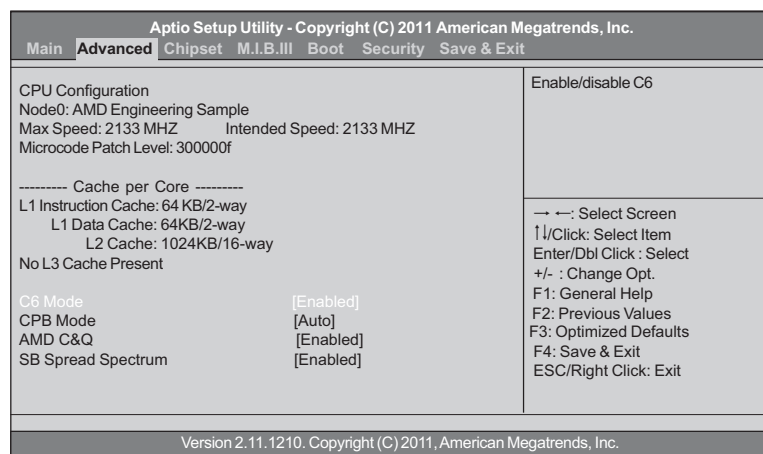

Max Speed (2133 MHz) Intended Speed (2133 MHz)

This item shows the maximum & intended speed of the CPU.

Microcode Patch Level (300000f)

This item shows the Microcode revision.

L1 Instruction Cache (64KB/2-way)

This item shows CPU L1 Cache.

L1 Data Cache (64KB/2-way)

This item shows CPU L1 Cache.

L2 Cache (1024KB/16-way)

This item shows CPU L2 Cache.

No L3 Cache Present

This item shows CPU L3 Cache.

C6Mode (Enabled)

This item enables or disables the C6 mode.

CPB Mode (Auto)

This item is used to set the CPB mode.

AMD C&Q (Enabled)

This item enables or disables the CPU C&Q Function.

SB Spread Spectrum (Enabled)

This item enables or disables the SB Clock Spread Spectrum.

Press <Esc> to return to the Advanced Menu page.

Using BIOS

SATA Configuration

Use this item to show the mode of serial SATA configuration options.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.III Boot Security Save & Exit
SATA Configuration		
Serial-ATA Controller	[Enabled]	
SATA Mode	[IDE]	
SATA Port1	WDC WD5000AAKX (500.1	
SATA Port2	Not Present	
SATA Port3	Not Present	
SATA Port4	Not Present	
SATA Port5	Not Present	
SATA Port6	Not Present	
		→ ←: Select Screen ↑↓/Click: Select Item Enter/Dbt Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Serial-ATA Controller (Enabled)

Use this item to select the Serial-ATA controller options: Disabled, Compatible, Enabled.

SATA Mode (IDE)

Use this item to select SATA mode.

SATA Port1~6 (WDC WD5000AAKX (500.1/Not Present)


This motherboard supports six SATA channels and each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel, and each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel.

Press <Esc> to return to the Advanced Menu page.

Using BIOS

USB Configuration

Use this item to show the information of USB configuration.

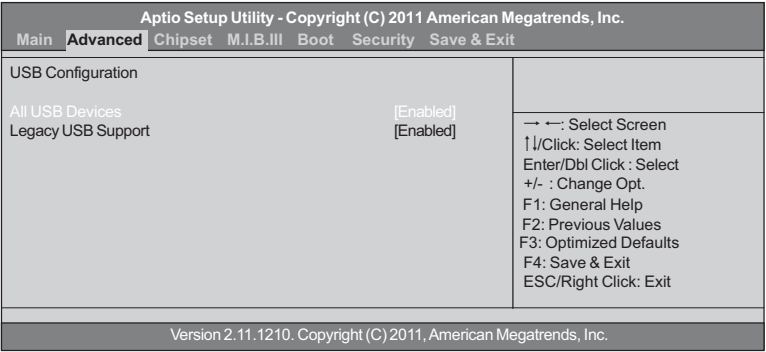

All USB Devices (Enabled)

Use this item to enable or disable all USB devices.

Legacy USB Support (Enabled)

Use this item to enable or disable support for legacy USB devices.

Press <Esc> to return to the Advanced Menu page.

Super IO Configuration

Use this item to show the information of Super IO configuration.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.	
Main	Advanced
Super IO Configuration ▶ Serial Port 0 Configuration ▶ Parallel Port Configuration	Set Parameters of Serial Port 0 (COMA) → ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbt Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.	

▶ Serial Port 0 Configuration

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.	
Main	Advanced
Serial Port 0 Configuration Serial Port [Enabled] Device Settings IO=3F8h; IRQ=4; Change Settings [Auto]	Enabled or Disabled Serial Port (COM) → ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbt Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.	

Serial Port (Enabled)

This item allows you to enable or disable serial port.

Device Settings (IO=3F8h; IRQ=4)

This item shows the information of the device settings.

Change Settings (Auto)

Use this item to change device settings.

Press <Esc> to return to the Super IO Configuration page.

Using BIOS

► Parallel Port Configuration

Scroll to this item and press <Enter> to view the following screen:

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset M.I.B.I.II Boot Security Save & Exit
Parallel Port Configuration		Enable or Disable Parallel Port (LPT/LPTE)
Parallel Port	[Enabled]	→ ←: Select Screen ↑↓/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Device Settings	IO=378h; IRQ=5;	
Change Settings	[Auto]	
Device Mode	[Standard and Bi-di ...]	
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Parallel Port (Enabled)

This item allows you to enable or disable parallel port.

Device Settings (IO=378h; IRQ=5:)

This item shows the information of the device settings.

Change Settings (Auto)

Use this item to change device settings.

Device Mode (Standard and Bi-di ...)


This item shows the information of the device mode.

Press <Esc> to return to the Super IO Configuration page.

Press <Esc> to return to the Advanced Menu page.


Chipset Menu

The chipset menu items allow you to change the settings for the North chipset, South chipset and other system.

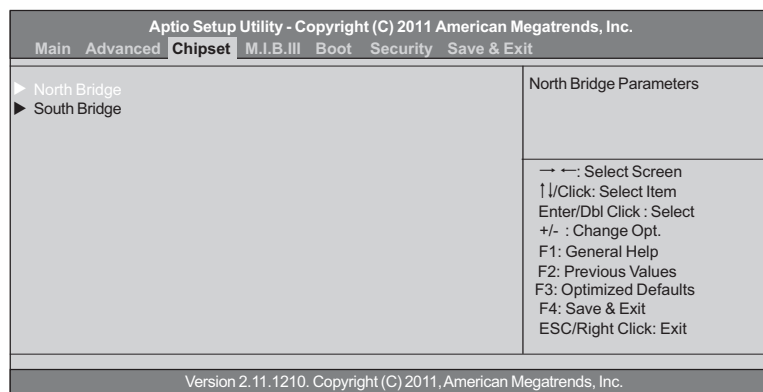

► North Bridge

Scroll to this item and press <Enter> and view the following screen:

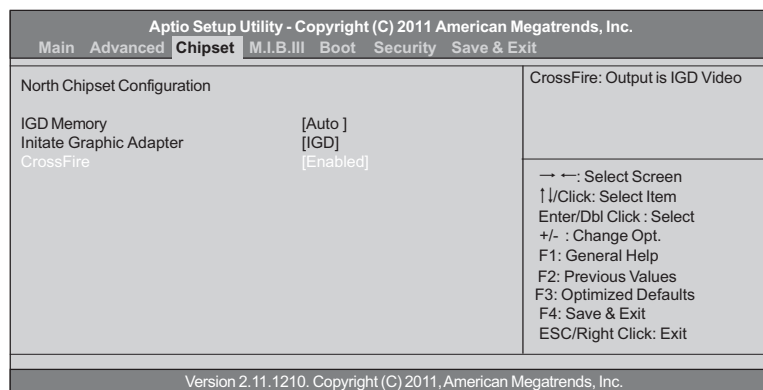

IGD Memory (Auto)

This item shows the information of the IGD(Internal Graphics device) memory.

Initate Graphic Adapter (IGD)

This item allows you to select graphics controller to use as the primary boot device.

CrossFire (Enabled)


This item allows you to enable or disable crossfire function.

Press <Esc> to return to the Chipset Menu page.

Using BIOS

► South Bridge

Scroll to this item and press <Enter> to view the following screen.

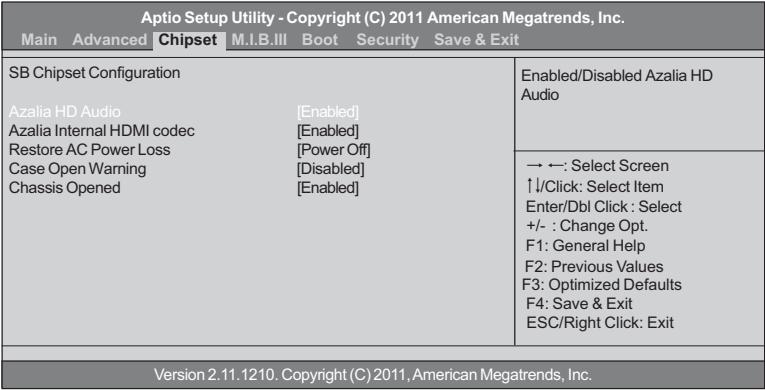

Azalia HD Audio (Enabled)

This item enables or disables Azalia HD audio.

Azalia Internal HDMI codec (Enabled)

This item enables or disables Azalia Internal HDMI codec.

Restore AC Power Loss (Power Off)

This item specifies what state to go to when power is re-applied after a power failure (G3 state).

Case Open Warning (Disabled)

This item enables or disables the warning if the case is opened up, and the item below indicates the current status of the case.

Chassis Opened (Enabled)

This item indicates whether the case has been opened.

Press <Esc> to return to the Chipset Menu page.

M.I.B.III (MB Intelligent BIOS III) Menu

This page enables you to set the clock speed and system bus for your system. The clock speed and system bus are determined by the kind of processor you have installed in your system.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset
	M.I.B.III	Boot Security Save & Exit
Memory Clock	[Auto]	This Option Allows User to select different Memory Clock. Default value is 400Mhz.
Memory Mode	[Auto]	
Memory Clock DCT0 is :	(DDR-1333/667Mhz)	→ ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbl Click : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Memory Clock DCT1 is :	None	
CAS# Latency (tCL)	9 CLK	
RAS# to CAS# Delay (tRCD)	9 CLK	
Row Precharge Time (tRP)	9 CLK	
RAS# Active Time (tRAS)	24 CLK	
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Memory Clock (Auto)

This item is used to set the memory clock.

Memory Mode (Auto)

This item is used to set the memory Mode.

Memory Clock DCT0 is (DDR-1333/667Mhz)

This item shows current memory clock of DCT0.

Memory Clock DCT1 is (None)

This item shows current memory clock of DCT1.

CAS#Latency(tcl) (9CLK)

This item determines the operation of DDR SDRAM memory CAS(column address strobe). It is recommended that you leave this item at the default value. The 2T setting requires faster memory that specifically supports this mode.

RAS# to CAS# Delay(tRD) (9CLK)

This item specifies the RAS# to CAS# delay to Rd/Wr command to the same bank.

Row Precharge Time(tRP) (9CLK)

This item specifies Row precharge to Active or Auto-Refresh of the same bank.

RAS# Active Time(tRAS) (24CLK)

This item specifies the RAS# active time.

Press <Esc> to return to the M.I.B.III Menu page.

Using BIOS

Boot Menu

This page enables you to set the keyboard NumLock state.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.						
Main	Advanced	Chipset	M.I.B.I.III	Boot	Security	Save & Exit
Boot Configuration				Select the keyboard NumLock state		
Bootup NumLock State				[On]		
Set Boot Priority						
1st Boot				[Hard Disk]		
2nd Boot				[CD/DVD]		
3rd Boot				[USB Floppy/Floppy]		
4th Boot				[USB CD/DVD]		
5th Boot				[USB Hard Disk]		
6th Boot				[USB KEY]		
7th Boot				[Network]		
8th Boot				[UEFI]		
▶ CD/DVD ROM Drive Priorities ▶ Hard Disk Drive Priorities ▶ USB Floppy/Floppy Drive Priorities ▶ USB CD/DVD ROM Drive Priorities ▶ USB HardDisk Drive Priorities ▶ USB KEY Drive Priorities ▶ NETWORK Device Priorities ▶ UEFI Boot Drive Priorities				→ ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit		
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.						

Boot Configuration

This item shows the information of the Boot Configuration.

Bootup NumLock State (On)

This item enables you to select NumLock state.

Set Boot Priority

This item enables you to select boot priority for all boot devices.

1st/2nd/3rd/4th/5th/6th/7th/8th Boot

These items shows the boot priorities.

CD/DVD ROM Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing CD/DVD ROM drives.

Hard Disk Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing hard disk drives.

USB Floppy/Floppy Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing USB Floppy/Floppy drives.

USB CD/DVD ROM Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing USB CD/DVD ROM drives.

USB HardDisk Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing USB HardDisk drives.

Using BIOS

USB KEY Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing USB KEY drives.

Network Device Priorities

This item enables you to specify the sequence of loading the operating system from the installing network devices.

UEFI Boot Drive Priorities

This item enables you to specify the sequence of loading the operating system from the installing UEFI Boot drives.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset
<div> Main Advanced Chipset M.I.B.III Boot Security Save & Exit </div>		
Boot Option #1	[SATA: WDC WD5000AA...]	Select the keyboard NumLock state → ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbt Click : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

Security Menu

This page enables you to set setup administrator password and user password.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset
<div> Main Advanced Chipset M.I.B.III Boot Security Save & Exit </div>		
Administrator Password		Set Setup Administrator Password → ←: Select Screen ↑ ↓/Click: Select Item Enter/Dbt Click : Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		


Administrator Password

Press <Enter> to setup administrator password.

Using BIOS

Save & Exit Menu

This page enables you to exit system setup after saving or without saving the changes.

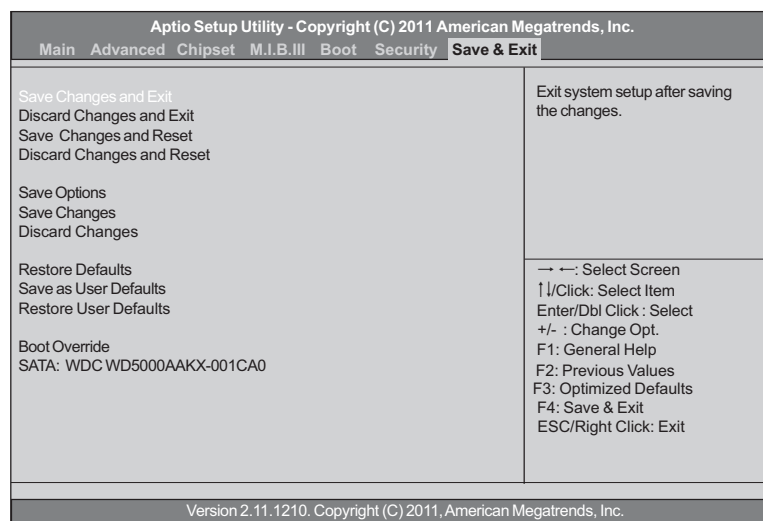

Save Changes and Exit

Use this item enables you to exit system setup after saving the changes.

Discard Changes and Exit

Use this item enables you to exit system setup without saving any changes.

Save Changes and Reset

Use this item enables you to reset the system setup after saving the changes.

Discard Changes and Reset

Use this item enables you to reset system setup without saving any changes.

Save Options

Use this item enables you to save the options that you have made.

Save Changes

Use this item enables you to save the changes that you have made.

Discard Changes

Use this item enables you to discard any changes that you have made.

Restore Defaults

Use this item enables you to restore the system defaults.

Save as User Defaults

Use this item enables you to save the changes that you have made as user defaults.

Restore User Defaults

Use this item enables you to restore user defaults to all the setup options.

Using BIOS

Boot Override

Use this item enables you to set the device order.


Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.						
Main	Advanced	Chipset	M.I.B.I.I.I	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset Save Options Save Changes Discard Changes Restore Defaults Save as User Defaults Restore User Defaults Boot Override Generic Storage Device 0.00						Exit system setup after saving the changes. → ←: Select Screen ↑/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Load Optimized Defaults Load Optimized Defaults? <div>Yes No</div>						
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.						

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.						
Main	Advanced	Chipset	M.I.B.I.I.I	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset Save Options Save Changes Discard Changes Restore Defaults Save as User Defaults Restore User Defaults Boot Override Generic Storage Device 0.00						Exit system setup after saving the changes. → ←: Select Screen ↑/Click: Select Item Enter/Dbl Click: Select +/- : Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC/Right Click: Exit
Save & Exit Setup Save configuratin and exit? <div>Yes No</div>						
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.						

Using BIOS



If the following picture appears when entering the setup utility, you can use the mouse or the keyboard to operate.

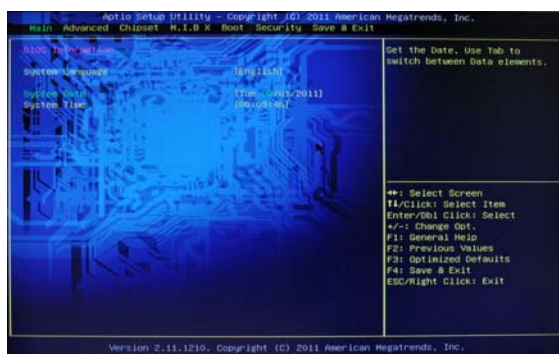

Updating the BIOS

You can download and install updated BIOS for this motherboard from the manufacturer's Web site. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

- 1 If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
- 2 If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
- 3 Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
- 4 Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
- 5 Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
- 6 At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AFUDOS.EXE 040706.ROM
- 7 When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.

Using BIOS

Chapter 4

Using the Motherboard Software

About the Software DVD-ROM/CD-ROM

The support software DVD-ROM/CD-ROM that is included in the motherboard package contains all the drivers and utility programs needed to properly run the bundled products. Below you can find a brief description of each software program, and the location for your motherboard version. More information on some programs is available in a README file, located in the same directory as the software. Before installing any software, always inspect the folder for files named README.TXT or something similar. These files may contain important information that is not included in this manual.

1. *Never try to install all software from folder that is not specified for use with your motherboard.*
2. *The notice of Intel HD Audio Installation (optional): The Intel High Definition audio functionality unexpectedly quits working in Windows Server 2003 Service Pack 1 or Windows XP Professional x64 Edition. Users need to download and install the update packages from the Microsoft Download Center “before” installing HD audio driver bundled in the driver disk. Please log on to <http://support.microsoft.com/default.aspx?scid=kb;en-us;901105#appliesto> for more information.*

Auto-installing under Windows XP/Vista/7

The Auto-install DVD-ROM/CD-ROM makes it easy for you to install the drivers and software for your motherboard.



If the Auto-install DVD-ROM/CD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Refer to the Utility Folder Installation Notes later in this chapter.

The support software DVD-ROM/CD-ROM disc loads automatically under Windows XP/Vista/7. When you insert the DVD-ROM/CD-ROM disc in the DVD-ROM/CD-ROM drive, the autorun feature will automatically bring up the install screen. The screen has three buttons on it, Setup, Browse CD and Exit.



* For reference only



If the opening screen does not appear; double-click the file “setup.exe” in the root directory.

Using the Motherboard Software

Drivers

Setup	Click the Setup button to run the software installation program. Select from the menu which software you want to install.
Utilities	Click the Utilities button to display the application software and other software utilities that are available on the disk. Select the software you want to install then follow installation procedure.
Browse CD	<p>The Browse CD button is the standard Windows command that allows you to open Windows Explorer and show the contents of the support disk.</p> <p>Before installing the software from Windows Explorer, look for a file named README.TXT or something similar. This file may contain important information to help you install the software correctly.</p> <p>Some software is installed in separate folders for different operating systems.</p> <p>In installing the software, execute a file named SETUP.EXE by double-clicking the file and then following the instructions on the screen.</p>
Exit	The EXIT button closes the Auto Setup window.

Utilities

Lists the software utilities that are available on the disk.


Information

Displays the path for all software and drivers available on the disk.

Running Setup

Follow these instructions to install device drivers and software for the motherboard:

- 1. Click **Setup**. The installation program begins:

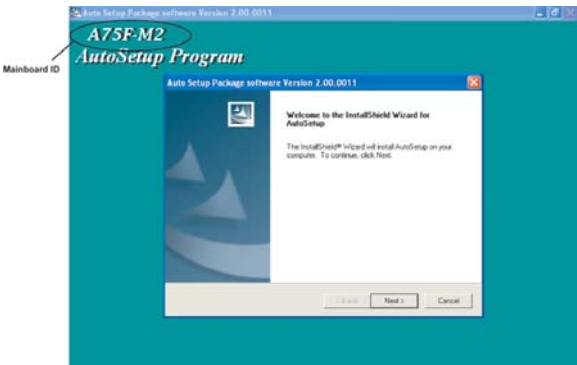


The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.


The motherboard identification is located in the upper left-hand corner.

Using the Motherboard Software

2. Click **Next**. The following screen appears:

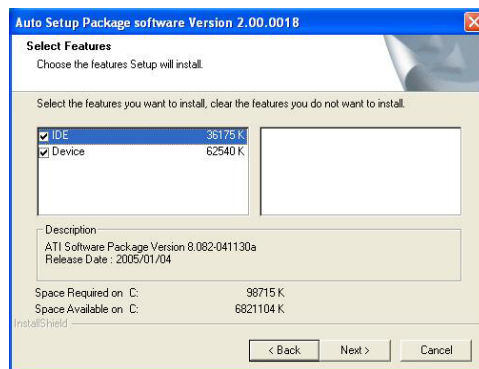

3. Check the box next to the items you want to install. The default options are recommended.
4. Click **Next** run the Installation Wizard. An item installation screen appears:

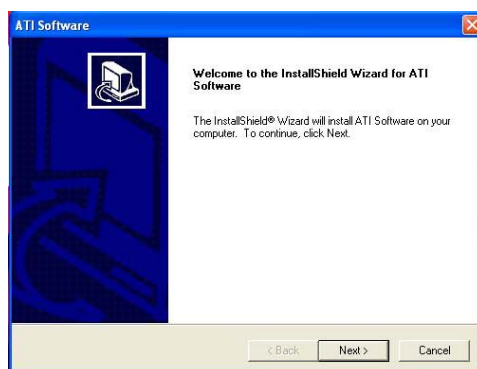

5. Follow the instructions on the screen to install the items.




Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to restart a few times to complete the installation.

Using the Motherboard Software



Windows Vista/7 will appear below UAC (User Account Control) message after the system restart. You must select “Allow” to install the next driver. Continue this process to complete the drivers installation.

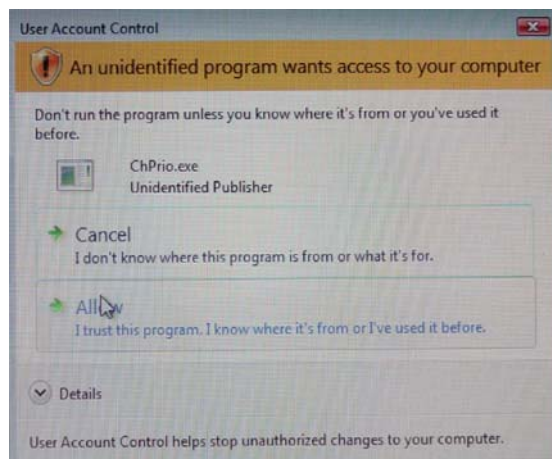

Manual Installation

Insert the disk in the DVD-ROM/CD-ROM drive and locate the PATH.DOC file in the root directory. This file contains the information needed to locate the drivers for your motherboard.

Look for the chipset and motherboard model; then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

Utility Software Reference

All the utility software available from this page is Windows compliant. They are provided only for the convenience of the customer. The following software is furnished under license and may only be used or copied in accordance with the terms of the license.



These software(s) are subject to change at anytime without prior notice. Please refer to the support disk for available software.

Using the Motherboard Software

Chapter 5

CrossFire® Technology (AMD Dual Graphics) Support

CrossFire® Technology

The CrossFire® technology provides significant display performance boost to AMD-based systems by inserting the external PCI Express graphics card and enabling both the discrete GPU and the AMDA75 graphics core to render simultaneously in Hybrid CrossFire™ mode.

Follow the steps below to start the CrossFire® technology.

1. Insert a graphics card (which can be used for CrossFire® technology, such as HD6670 series) into the **PCIEX16** slot.

Make sure that the card is properly seated on the slot.




* For reference only

2. For CrossFire®, you must enter the BIOS, set the *Initate Graphic Adapter* in *Advanced Menu* to **IGD**. Then press F4 to save the configuration and exit the BIOS.


Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main	Advanced	Chipset
M.I.B.III	Boot	Security
Save & Exit		
North Chipset Configuration		CrossFire: Output is IGD Video
IGD Memory	[Auto]	
Initate Graphic Adapter	[IGD]	
CrossFire	[Enabled]	
		→ ←:Select Screen ↑ ↓:Select Item Enter : Select +/- : Change Opt. F1:General Help F2:Previous Values F3:Optimized Defaults F4:Save & Exit ESC:Exit
Version 2.11.1210. Copyright (C) 2011, American Megatrends, Inc.		

CrossFire® Technology (AMD Dual Graphics) Support

3. Set the *CrossFire* in *Advanced Menu* to **Enabled**. Then press F4 to save the configuration and exit the BIOS.

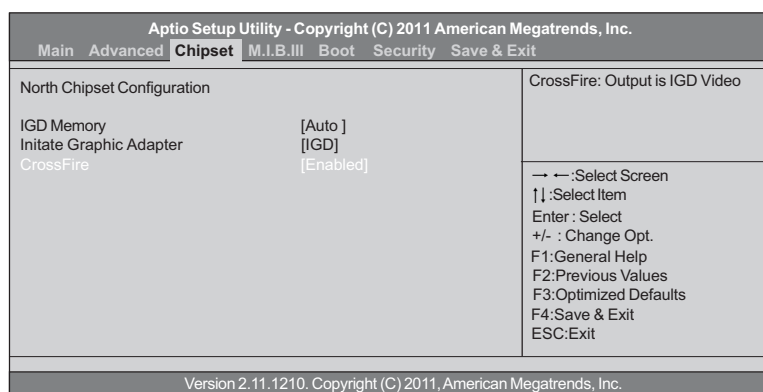

4. Click with your right mouse button on *My Computer*, then click the option *Manage* and choose the *Device Manager*, finally, click the Display Adapters. The following screen appears. Be sure that the External ATI graphics (ATI Radeon HD 6670) and Onboard graphics (Radeon HD 6530D or HD6550D) are both displaying in the Display adapters.

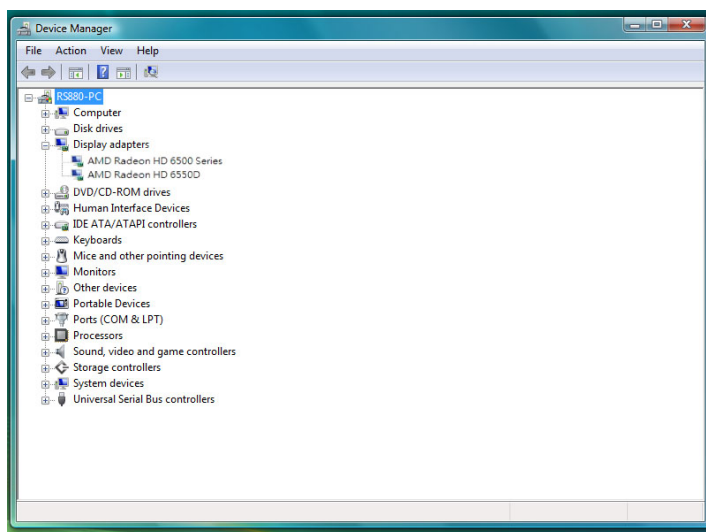

CrossFire® Technology [AMD Dual Graphics] Support

Supported DUAL Graphics Combinations

"Lynx" Platform

DISCRETE GPU			DESKTOP APU		
Discrete Graphics Product	Radeon™ Brand	Frame Buffer	A4-Series "WinterPark" HD 6410D	A6-Series "BeaverCreek" HD 6530D	A8-Series "BeaverCreek" HD 6550D
Desktop Configurations					
Turks XT	HD6670	GDDR5	Attach Only (No DG)	HD 6690D2	HD 6690D2*
Turks Pro	HD6570	DDR3	Attach Only (No DG)	HD 6610D2*	HD 6630D2*
Calcos	HD6450	GDDR5	HD 6510D2*	HD 6550D2	HD 6550D2
Cedar	HD6350	DDR3	HD 6430D2	Attach Only (No DG)	Attach Only (No DG)

*"Attach Only (No DG)" indicates supported discrete graphics attachment without Dual Graphics.

*"HD 6XXXX2" indicates Dual-Graphics is supported with the resulting Dual-Graphics model number


* Recommended discrete graphics combinations

E-Series products do not support Dual Graphics



Please reference latest AMD Dual Graphics? Technology Graphic Card support list on AMD official website and subject to change without notice.

5. Enter AMD VISION Engine Control Center, you can see the option of *CrossFire™*, click it and select *Enable CrossFire™*, then CrossFire® starts.

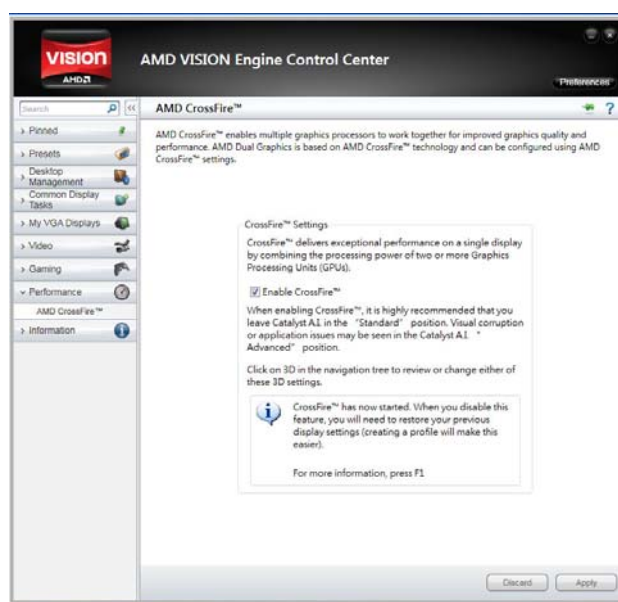

To disable CrossFire®, please make sure to cancel *Enable CrossFire™* in Catalyst Control Center firstly.

CrossFire® Technology [AMD Dual Graphics] Support

Recommendation

1.The APU in the A75 platform delivers a discrete-class of graphics performance and enables leading GPU compute capability

-Adding a discrete GPU is optional to extend graphics and GPU compute capacity

2.For optimal performance uplift, AMD recommends Dual Graphics (CrossFire® Technology) combinations of

-A4 and Discrete GPU model Radeon HD6450

-A6 and Discrete GPU model Radeon HD6570

-A8 and Discrete GPU model Radeon HD6570 or HD6670

3.AMD recommends a balanced system memory configuration of at least 4GB of 1333-DDR3 (2GB x 2GB).

Single channel and unbalanced memory configuration can promise both APU and Dual Graphics performance.

4.CrossFire® Technology (AMD Dual Graphics) Support on OS Windows 7 only due to the limitation by AMD.

CrossFire® Technology [AMD Dual Graphics] Support

Chapter 6

Setting Up AMD A75 RAID Configuration

Setting Up a bootable RAID Array

This section explains how to configure a bootable AMD RAID array.

Setting Up the BIOS

- 1 Start your computer, then press Delete to enter the BIOS setup.
The BIOS CMOS Setup Utility screen appears.

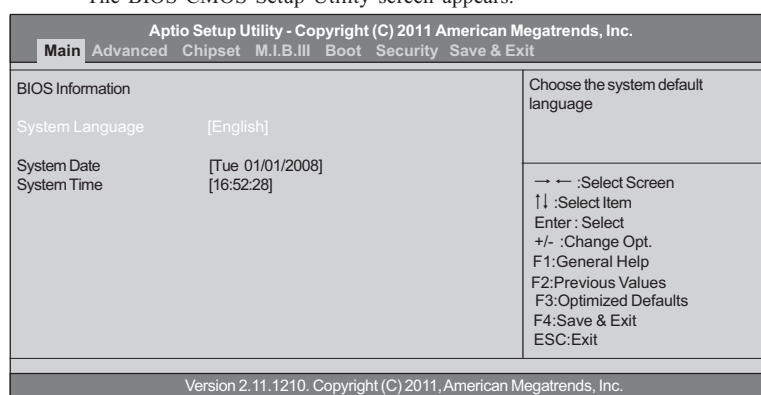


Figure 1.1 BIOS CMOS Setup Utility Main Screen

- 2 Use the arrow keys to select Advanced menu (see Figure 1.1), then select SATA Configuration and press Enter.

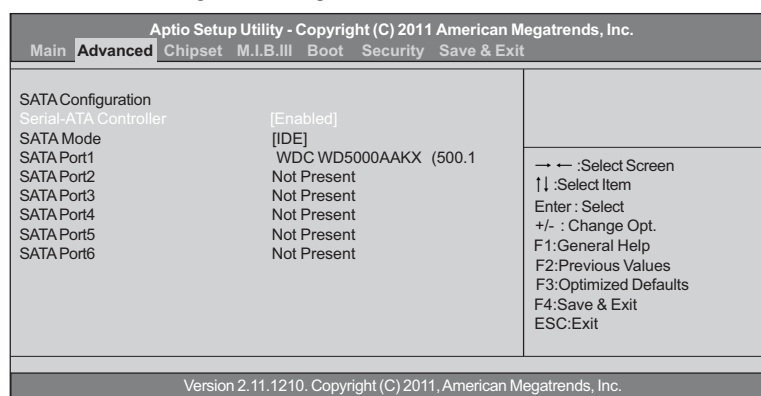


Figure 1.2 SATA Configuration Screen

- 3 Use the arrow keys to select the SATA Configuration (see Figure 1.2) and globally set SATA Configuration to RAID.

Setting Up AMD A75 RAID Configuration

- 4 Press F4 to save the configuration and exit.
The PC reboots.
- 5 Enter the RAID BIOS Setup by pressing Ctrl-F when prompted, and proceed to set up the AMD RAID BIOS as described in the next section.

Configuring the AMD RAID BIOS (Windows XP Installation)

The AMD RAID BIOS set up lets you choose the RAID type and which hard drives you want to make part of the array.

Entering the RAID BIOS Setup:

- 1 Wait until you see the RAID software prompting you to press Ctrl-F.

The RAID prompt appears as part of the system POST and boot process prior to loading of the OS. You have a few seconds to press Ctrl-F before the screen disappears.

- 2 Press Ctrl-F.

The Main Menu screen appears (Figure 1.3).

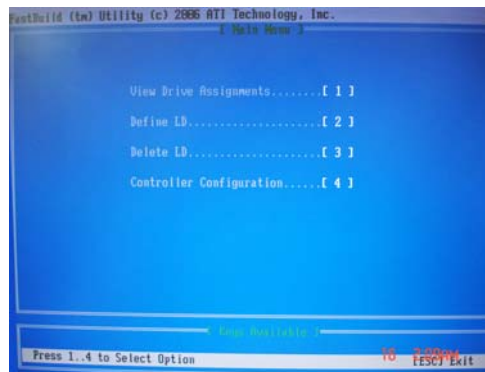


Figure 1.3 Main Menu

Setting Up AMD A75 RAID Configuration

- 3 Select [2], then select LD 1 in the following page.

The Define LD Menu screen appears (Figure 1.4).



Figure 1.4 Define LD Menu

Using the Define a New Array Screen

If necessary, press the tab key to move from field to field until the appropriate field is highlighted.



Note: If you want to use the function of the following RAID Mode, you have to install enough HDD.

RAID READY (1 piece of HDD); RAID 0,1 ,JBOD (2 or more pieces of HDD); RAID 0+1 (4 pieces of HDD)

- **Selecting the RAID Mode**

By default, this is set to Mirroring. To change to a different RAID mode, press the spacebar until the mode that you want appears in the RAID Mode box—RAID0/1/10/JBOD.

Note: Not all RAID levels are supported on all platforms.

- **Selecting the Stripe Block Size**

Stripe block size is given in kilobytes, and affects how data is arranged on the disk. It is recommended to leave this value at the default Optimal, which is 64KB, but the values can be 64 KB and 128 KB. When choose RAID 1, the Stripe block size is unchangeable.

Setting Up AMD A75 RAID Configuration

Assigning the Disks

- 1. Select the Assignment to Y to designate a free disk to be used as a RAID array disk.

Figure 1.5 illustrates the Define a New Array screen after two disks have been assigned as RAID 0 array disks.

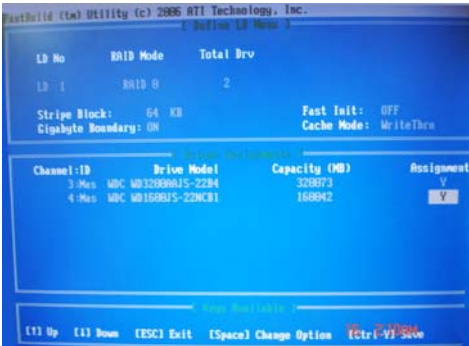


Figure 1.5 FastBuild Utility—Array Disks Assigned

- 2. Press Ctrl-Y to save the configuration and exit.

The Define LD Menu screen appears (Figure 1.6).



Figure 1.6 Define LD Menu

Setting Up AMD A75 RAID Configuration

3. Press ESC to exit.

The Main Menu screen appears (Figure 1.7).

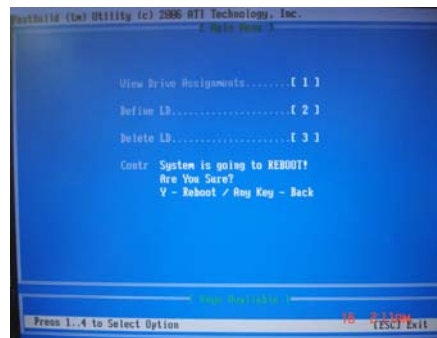


Figure 1.7 Main Menu

4. Press Y to reboot.

The following screen appears (Figure 1.8).

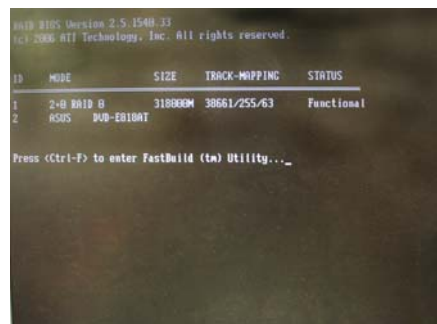


Figure 1.8

Setting Up AMD A75 RAID Configuration

Installing the RAID Drivers

Your system may come with a Windows install CD that already includes AMD RAID drivers. If so, then this section is not relevant.

If that is not the case (or you are trying to install a new version of Windows), then you will need an AMD RAID driver F6 install floppy. Check to see if one came with your system. If not, you can create one by downloading the appropriate driver package and following the steps in this section.

- 1 Copy all files in "...\\RAID\\ATI\\A75\\Floppy\\Win3264" to a floppy disk.
- 2 After you complete the RAID BIOS setup, boot from the Windows CD.
The Windows Setup program starts.



Figure 1.9

- 3 Press F6 and wait a few moments for the Windows Setup screen to appear.

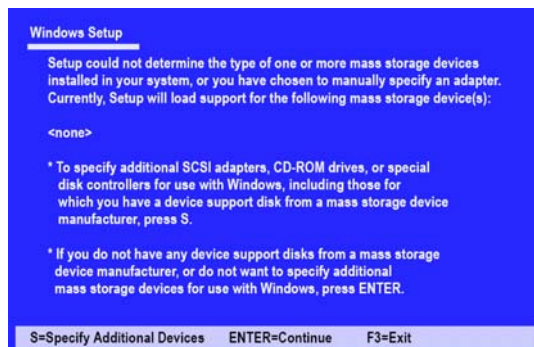


Figure 1.10 Windows Setup—Specify Devices

- 4 Specify the AMD drivers.
 - a Insert the floppy that has the RAID driver, press S, then press Enter.

Setting Up AMD A75 RAID Configuration

The following Windows Setup screen appears:

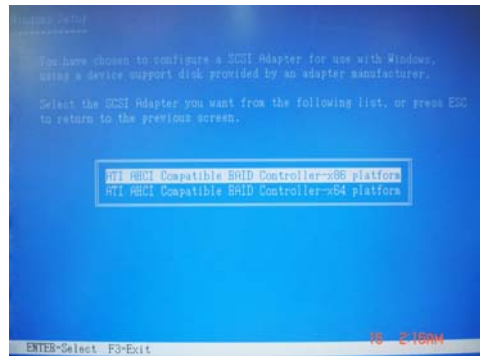


Figure 1.11 Windows Setup—Selected SCSI Adapter

- b Select “ATI AHCI Compatible RAID Controller-x86 platform” and press Enter for 32-bit OS or Select “ATI AHCI Compatible RAID Controller-x64 platform” and press Enter for 64-bit OS.

The following Windows Setup screen appears listing both drivers:.

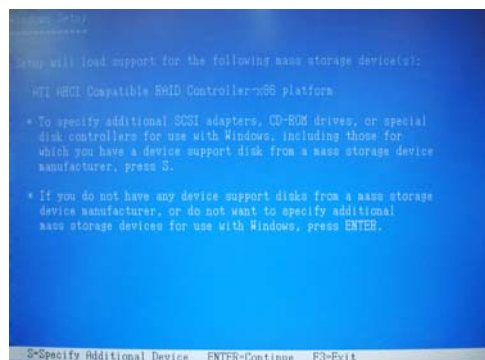


Figure 1.12 Windows Setup—AMD drives listed

- 5 Press Enter to continue with Windows XP Installation.
Be sure to leave the floppy disk inserted in the floppy drive until the blue screen portion of Windows XP installation is completed, then take out the floppy.
- 6 Follow the instructions on how to install Windows XP.
After Windows XP is completely installed, it is recommended that you install the ForceWare software in order to access the FastBuild RAID Management tool.

Note: Each time you add a new hard drive to a RAID array, the RAID driver will have to be installed under Windows once for that hard drive. After that, the driver will not have to be installed.

Setting Up AMD A75 RAID Configuration

Memo

Setting Up AMD A75 RAID Configuration

Chapter 7

Trouble Shooting

Start up problems during assembly

After assembling the PC for the first time you may experience some start up problems. Before calling for technical support or returning for warranty, this chapter may help to address some of the common questions using some basic troubleshooting tips.

a) System does not power up and the fans are not running.

1. Disassemble the PC to remove the VGA adaptor card, DDR memory, LAN, USB and other peripherals including keyboard and mouse. Leave only the motherboard, CPU with CPU cooler and power supply connected. Turn on again to see if the CPU and power supply fans are running.
2. Make sure to remove any unused screws or other metal objects such as screwdrivers from the inside PC case. This is to prevent damage from short circuit.
3. Check the CPU FAN connector is connected to the motherboard.
4. For Intel platforms check the pins on the CPU socket for damage or bent. A bent pin may cause failure to boot and sometimes permanent damage from short circuit.
5. Check the 12V power connector is connected to the motherboard.
6. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

b) Power is on, fans are running but there is no display

1. Make sure the monitor is turned on and the monitor cable is properly connected to the PC.
2. Check the VGA adapter card (if applicable) is inserted properly.
3. Listen for beep sounds. If you are using internal PC speaker make sure it is connected.
 - a. continuous 3 short beeps : memory not detected
 - b. 1 long beep and 8 short beeps : VGA not detected

c) The PC suddenly shuts down while booting up.

1. The CPU may experience overheating so it will shutdown to protect itself. Ensure the CPU fan is working properly.

Trouble Shooting

2. From the BIOS setting, try to disable the Smartfan function to let the fan run at default speed. Doing a Load Optimised Default will also disable the Smartfan.

Start up problems after prolong use

After a prolong period of use your PC may experience start up problems again. This may be caused by breakdown of devices connected to the motherboard such as HDD, CPU fan, etc. The following tips may help to revive the PC or identify the cause of failure.

1. Clear the CMOS values using the CLR_CMOS jumper. Refer to CLR_CMOS jumper in Chapter 2 for Checking Jumper Settings in this user manual. When completed, follow up with a Load Optimised Default in the BIOS setup.
2. Check the CPU cooler fan for dust. Long term accumulation of dust will reduce its effectiveness to cool the processor. Clean the cooler or replace a new one if necessary.
3. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.
4. Remove the hard drive, optical drive or DDR memory to determine which of these component may be at fault.


Maintenance and care tips

Your computer, like any electrical appliance, requires proper care and maintenance. Here are some basic PC care tips to help prolong the life of the motherboard and keep it running as best as it can.

1. Keep your computer in a well ventilated area. Leave some space between the PC and the wall for sufficient airflow.
2. Keep your computer in a cool dry place. Avoid dusty areas, direct sunlight and areas of high moisture content.
3. Routinely clean the CPU cooler fan to remove dust and hair.
4. In places of hot and humid weather you should turn on your computer once every other week to circulate the air and prevent damage from humidity.
5. Add more memory to your computer if possible. This not only speeds up the system but also reduces the loading of your hard drive to prolong its life span.
6. If possible, ensure the power cord has an earth ground pin directly from the wall outlet. This will reduce voltage fluctuation that may damage sensitive devices.

Trouble Shooting

Basic Troubleshooting Flowchart

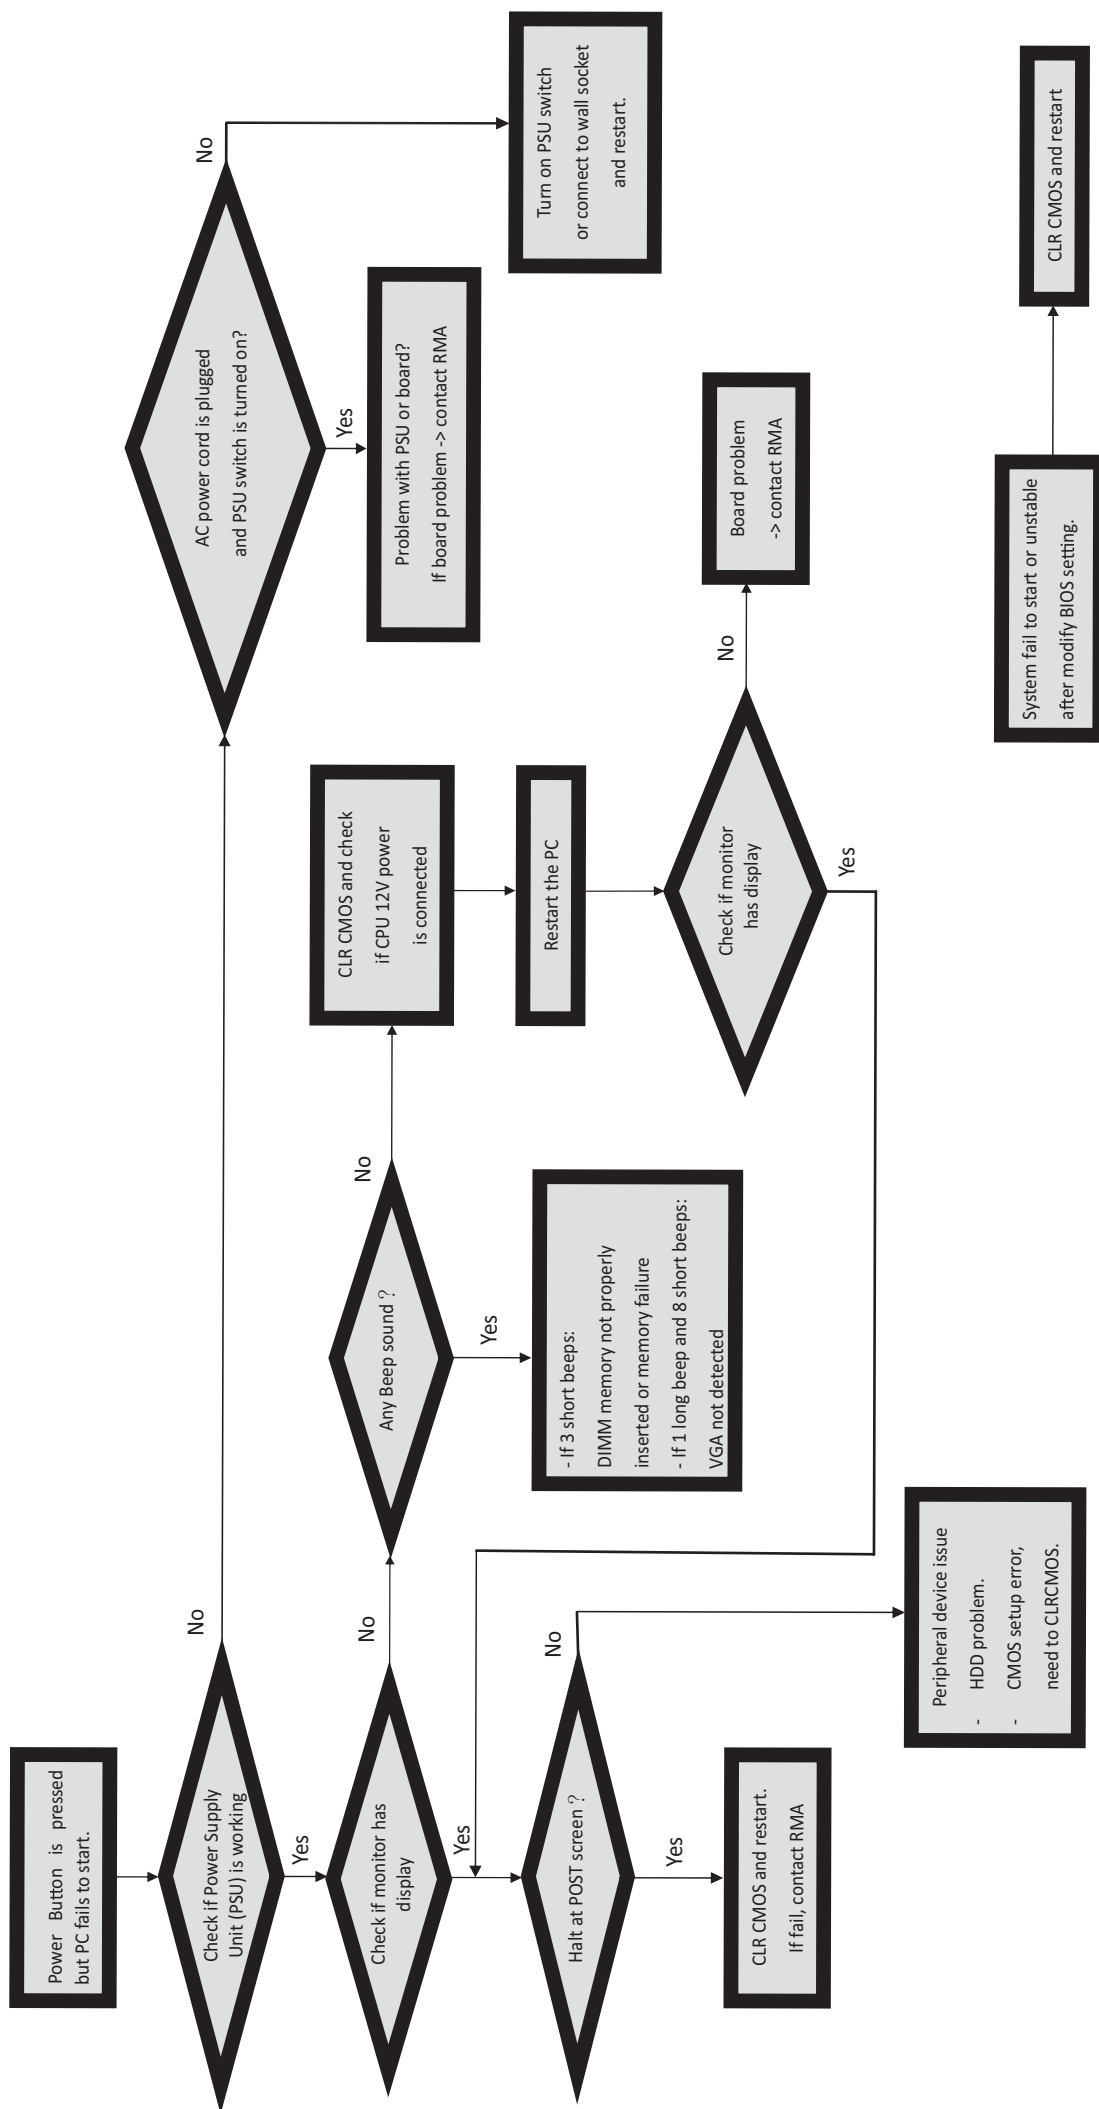

Memo

Trouble Shooting